



CAR SECURITY

SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

MAKE

RENAULT

MOD.

ESPACE

YEAR.

01 →

PETROL
DIESEL

ALARM/SIREN POSITION

Position the compact alarms and the sirens on the wheelhouse, passengers side.

CENTRAL UNIT POSITION

Position the modular systems and the modules under the plastic cover of the dashboard.

POWER SUPPLY

+30: Connect to the 4 mm² RED wire located in a multiway connector, in the fuse box.
- 31: Connect to one of the ground terminals located behind the left lateral bulkhead.

IGNITION WIRE

+15/54: Connect to the YELLOW wire, at the position nr.17, of the connector marked SS1 coming out of the central placed on the left of the fuses, under the passenger's side cover. As alternative, connect to the 2,5 mm² YELLOW wire located in the wiring harness along the steering column.

DIRECTION INDICATORS

Connect to the WHITE wire with LIGHT BLUE references, at the position nr.1, and to the WHITE wire with BLACK references, at the position nr.2, located in the wiring harness coming out of the 16 way connector, marked SP and coming out of the central placed on the left of the fuses, under the passenger's side cover.

ELECTRIC WINDOWS

Mixed motors controls (Art. 2980)

Front window, driver's side:

Cut the BLUE/BROWN and BLUE/WHITE wires located in the wiring harness coming out of the connector of the button inside the driver's side door.

Front window, passenger's side:

Cut the BLUE/YELLOW and BLUE wires located in the wiring harness coming out of the driver's side door.

CENTRAL DOORS LOCKING

Negative controls

Refer to the **diagram nr. 132** for Bridge serie antithefts. For 3100 serie antithefts refer to the **diagram nr.132A**.

IMMOBILISATION POINT

General ignition wire

Cut the 2 mm² YELLOW wire located in the wiring harness coming out of the connector of the ignition key.

STARTER

+50: Cut the ORANGE wire located in the wiring harness coming out of the 2 way connector placed on the side of the steering column, under the driver's side dashboard.

BONNET SWITCH

Install an additional switch on the headlamp support plate, driver's side.

DOORS SWITCH

Connect to the LIGHT BROWN wire with RED references, at the position nr. 12, in the connector marked SS1, coming out of the central placed on the left of the fuses, under the passenger's side cover

BOOT SWITCH

Connect to the GREEN wire located in the wiring harness coming out of the boot lamp.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°132

Diagram for the connection on **RENAULT ESPACE**
(for Bridge serie antithefts)

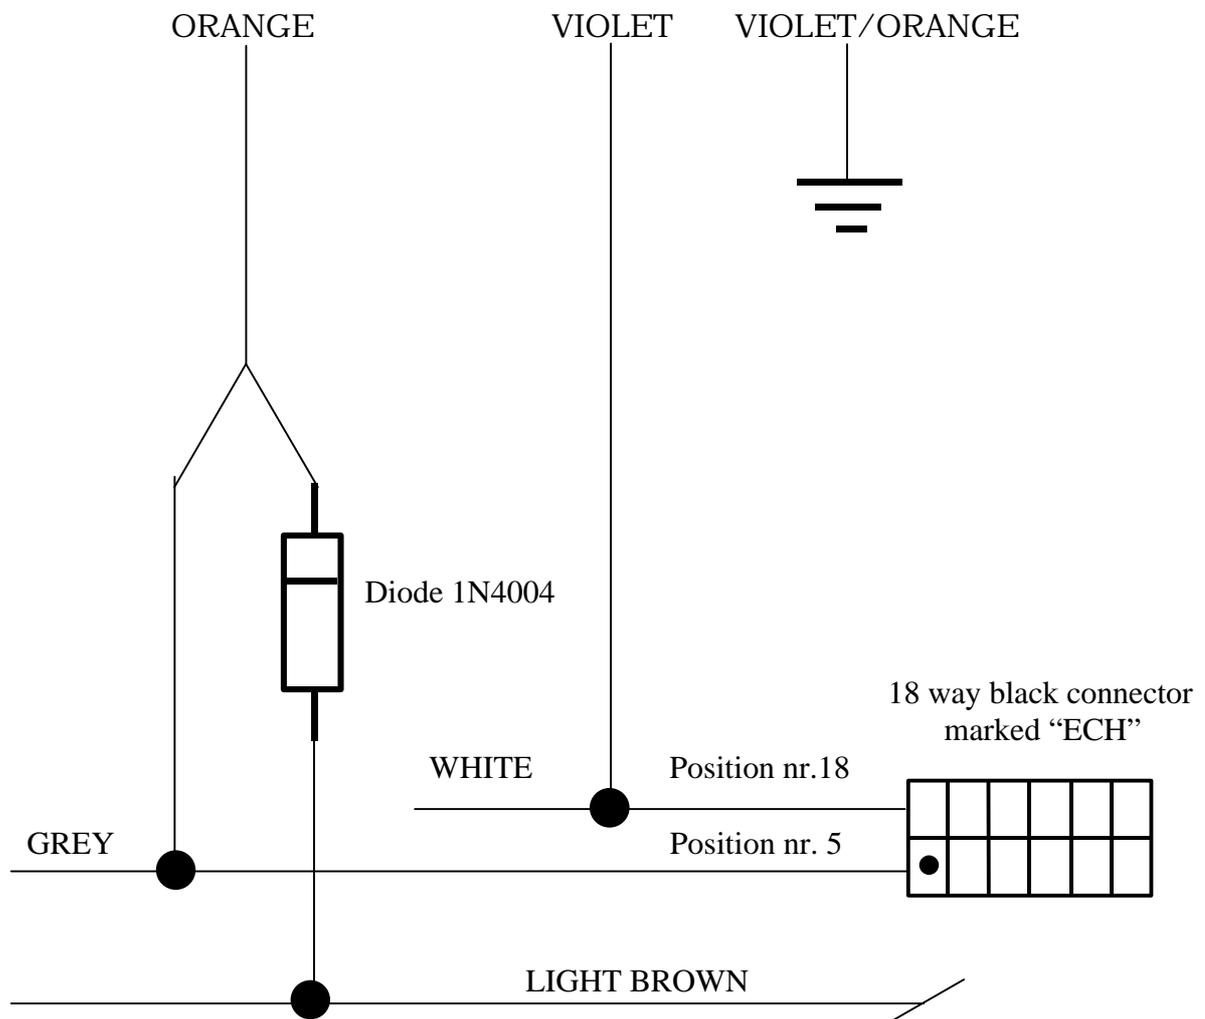

The wire is marked nr.730 located in the wiring harness coming out of the push button inside the driver's side door

The above connectors are located on the left of the fuse box, behind the central marked "VALEO", passenger's side.



CAR SECURITY


SPECIFIC VEHICLE ALARM FITTING INSTRUCTIONS

REV. 00

www.cobra.it

FITTING DIAGRAM N°132A

Diagram for the connection on RENAULT ESPACE
(for 3100 and 3900 series antithefts)

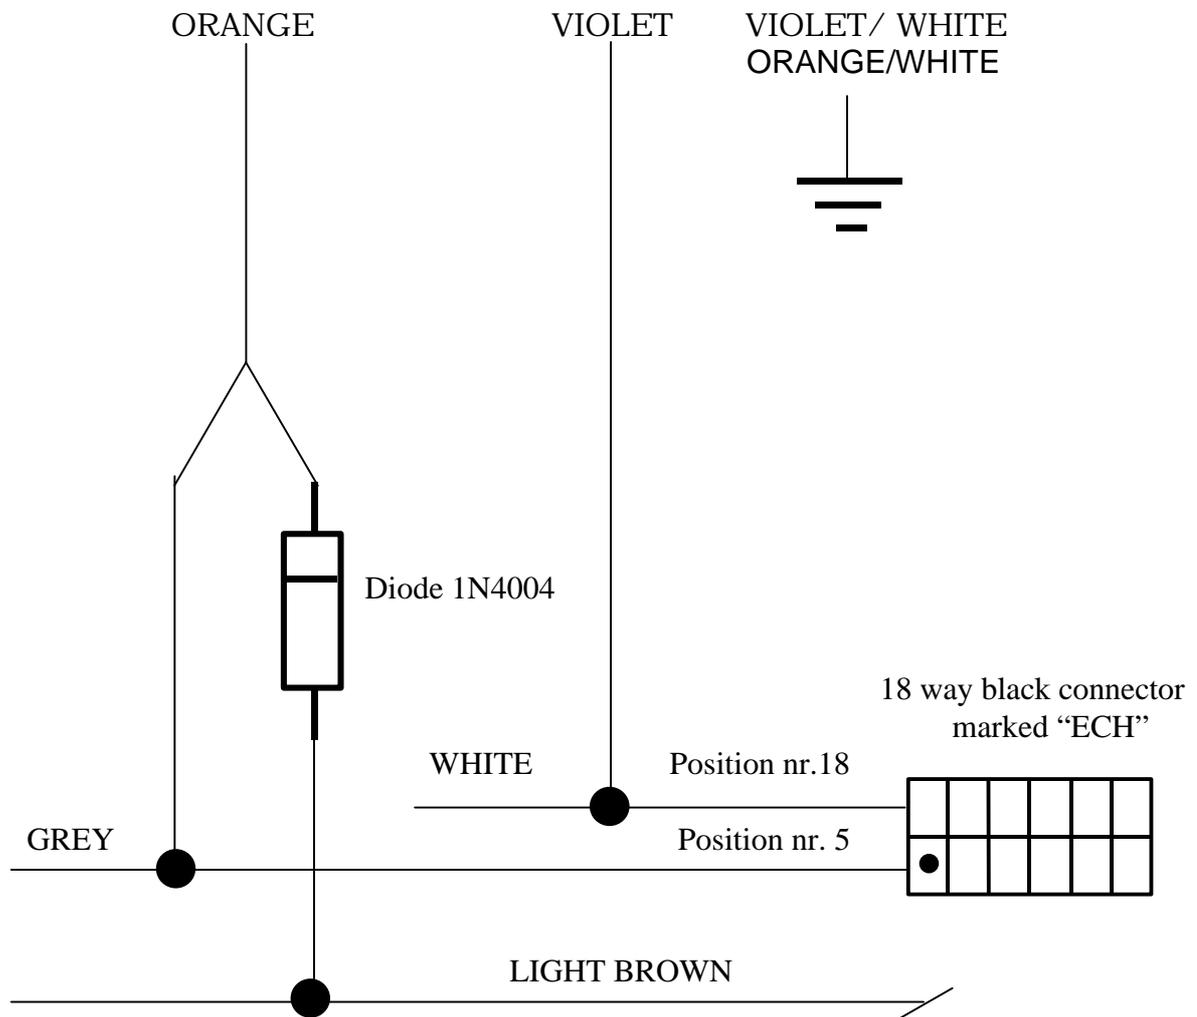

The wire is marked nr.730 located in the wiring harness coming out of the push button inside the driver's side door.

The above connectors are located on the left of the fuse box, behind the central marked "VALEO", passenger's side.