

PROCEDURE FOR AUTOMATICALLY SETTING THE DRIVER'S CONTROL

Ignition off.

Driver's control:

- Mixing to all cold.
- Fan speed to "0".
- Press de-icing (or "see clear" for AC versions) and head/feet, hold these buttons down, then turn on accessories feed.

While the control is setting itself, the driver's "mixing" warning light will flash. As soon as the warning lights flash, release the pressure on the buttons.

- **Setting completed and correct:**
driver's control, "mixing" and "head ventilation" warning lights illuminated.
- **Setting completed but incorrect:**
driver's control, "feet ventilation" and "head and feet ventilation" warning lights illuminated

Checks to make when the test is incorrect:

Check there is no mechanical blockage of the flaps or the motor gearing and that the distribution and mixing connectors are correctly connected.

